

Ar In Hmun Thlan:

- ✓ Ar In sakna hmun chu thli beng lohna lamah awmse duhthusam ani. Hei hian Ar In dang atanga natna darh tur a veng thei.
- ✓ Hmun rualrem leh sang, nikang tha leh tui tlin theihlohna.
- ✓ Ar In chu hmun sang laia sak anih chuan Ar In chhunga boruak inlumlet atha thei zawk ani.
- ✓ Midang te tana hnawksak leh rimchhe lo
- ✓ Chenna In nen inhnaih lutuk lo
- ✓ A ek thenfai zung zung theihna
- ✓ Tui leh electric tha
- ✓ Nakina farm tih zau/len duh pawh a tihlen zel theih turin ram zau lam
- ✓ Awlsam taka tlawhpawh theih

Ar In Chi Hrang Hrang Te:

- 1. Arte dahna/In (Brooder/ chick house):** Arte ni 1 atanga kar 8 inkar a upa an dah thin.
- 2. Ar thanglai In (Grower house) :** Ar tui chi (layer) kar 9-18 inkara upa an dah thin.
- 3. Arte - a thanglai In (Brooder cum grower house) :** Arte ni 1 atanga kar 18 inkara upa dahna. A bikin Ar tui tam chi (layer) dah nan an hmang thin.

4. **Ar tui tam chi In (Layer house) :** Ar kar 18 atanga an tui chhung, a tlangpuiin kar 72 thleng a upa dahna.

5. **Broiler In :** Broiler ni 1 atanga kar 6-8 thleng a upa dahna.

6. **Ar chi thlahtu In (Breeder house) :** Hetah hian ar pa leh ar nu, a chi thlahtu tur bik dah nan an hmang.

Ar In Sak Dantur Ruangam:

Kan In bul vela Ar In te tak te te sak nan chuan a ruangam han ruahman vak angai hranpa lem lova. Amaherawh chu Ar farm anga a lian tham sak dawn erawh chuan hriattur pawimawh tak tak a awm thung. Hengte hi zawm thei ila:-


- 1) Ar In chu pawn lam mi emaw motor emaw ten awlsam taka an tlawh pawh theihna hmun ual au takah sak loh tur.
- 2) Farm chhungah awlsam taka an luh mai mai theih loh nan a hungna tha tak siam a pawimawh.
- 3) Ar In chu boruak thianghlimin a paltlang theih turin a hmasa berah Ar note In (brooder shed), a dawtah a thanglai In (grower shed), a tawp berah a tuilai/puitling In sak a, rem tur ani. Hetianga tih hian Ar puitling atanga Ar note a natna an kaichhawn tur a veng ani.

4) Ar note leh a thanglai In chu ft. 50-100 tala inkar hlatah sak tur ani a, a thanglai leh a tuilai/a puitling In chu a tlem berah 100 metres a hlatah sak tur ani.

5) Artui dah thatna, office leh a chaw dahna In te chu farm luhtirh lamah dah hram hram tur ani a, hei hian Ar In bul hnaia mihring che vel a ti tlem.

6) Bawlhhlawh paihna leh Ar damlo dah hranna te chu Ar In atanga hla deuh hlek, a sir kil lamah siam thin tur ani.

Ar In Hawizawng: A hma - hnungin (a vang) chhak-thlang lam hawi, a dung in chhim leh hmar ep ni thei se.

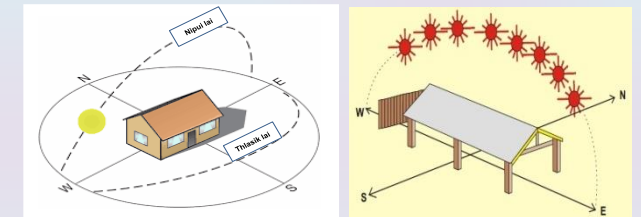

Ar In Len Zawng (A vang): Broiler 1 tan ft. 1 bial, Layer 1 tan ft. 2 bial an mamawh a. A tlangpuiin ft. 22-25 inkar vel anih hian Ar In chhung a tha taka boruak a chet vel theih nan a tawk viau. 9 m (30 ft) aiin a lian tur a ni lo. **Ar In Sei Zawng (A Dung):** Ar In sei zawng chu Ar tam dan azir, an upat zawng, hmun an mamawh zau zawng leh ram zau dan a zirin a danglam. A

seizawng hi a vanglam let 4-6 aia tam a ni ngai meuh lo.

Ar In San Zawng: Ar In sir lam bang san zawng chu hnathawktu nuamsa taka a kal vel theih tura sanga siam tur a ni. Dan naranin, ar in bang chu 2.1-2.4 m (7-8 ft) a sang a ni tur a ni. A laiah 10-12 ft.

Ar In Chung: Ar in chung chu a sir lam ve ve ah a awih chhuk tur a ni a. A bang 0.9-1.2 m (3-4 ft) a hla kalpelin a chung chu a sir ve veah a filawr tur a ni. A awih chhuk zawng hi 5° leh 45° (inchung atan di hman anih chuan) a siam tur a ni.

A Bul Thut (Foundation): Ar In a tui a luh mai mai loh nan a bul thut (foundation) tha a pawimawh hle a. Concrete ni thei se, lei hnuaiah ft. 1-1.5 a thuk, chutiang bawkin a chungah lei atanga ft. 1-1.5 a sangah.

A Chhuat: Chhuat hi fai tak, phui tha tak, tihfai awlsam, tlo tur, ro hma, nal lo, hnawng hip thei lo leh senso tlem theia siam tur a ni. Chhuat concrete a siam hi a tlo va, a thianghlim a, a phui tha a, sazu kaw hreuh tur a veng a, senso a hautak lutuk lo bawk a ni. A chhuat chu bang lam hawiin 40-60 cm dan zelah 1 cm in a awn tur a ni a, tui pipe 5 cm (2 inches) a lian chu 3 m (10 ft) dan

zelah dahin chu chuan ar in tih ruah a nih hunah tihfai a ti awlsam hle dawn a ni. A chhuat hi a bang pawn lamah ft 1.5 vel va chhuak thei se.

Kawngkhar: Ar In chhuat a phuai phah chi ah chuan a kawngkhar hi pawn lama in hawng zawngin dah atha. A kawngkhar len zawng hi 6 ft. x 2.5 ft vel. Kawngkhar hmalam zawngah chuan, ke chiahna 60 cm x 45 cm (2 ft x 1 ½ ft), 5 cm (2 inches) a thuk khuar siam tur a ni a. Hei hi invawn thianghlim nana buatsaih a ni.




A Bang San Zawng: Ar In bang san zawng hi a phui chin hi 1-1.5 ft. vel, brick emaw rangva emaw a remchang a piang a hman theih a. Hemi chin chunglam hi phelsep kawkalh, thir hrui (wire mesh) emaw net emaw pawh a hman theih.

A Chung Thlawk : 3.5 ft. aia tlem lo ani tur ani. Hei hian fur laia Ar In chhunga ruah lut tur a veng.

Eng (Lighting) : Lei atanga 6 ft.(1.8 m) vel a sangah, 10 ft. danah khai tur.



AR IN SAK (HOUSING OF POULTRY)

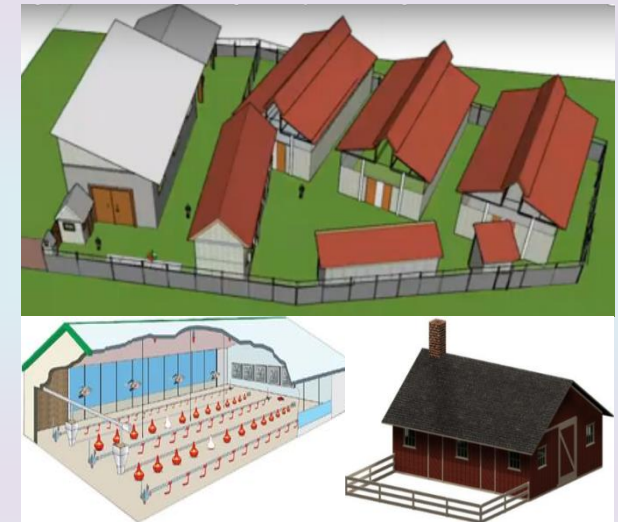

Prepared by:

Dr. Lalthazuali
SMS (Animal Science)
Krishi Vigyan Kendra
Lawngtlai District, Lawngtlai
Mizoram-796891